



FIGURE 1
10200-1/2

SUPPLY AIR FROM TRAILER RESERVOIR IS INTRODUCED INTO THE VALVE THROUGH THE INLET PORT.

VALVE SHOWN IN INITIAL OR CLOSED POSITION