



FIGURE 2

*10200-1/2*

VALVE OPENS WHEN AIR PRESSURE OVERCOMES THE SPRING FORCE. THIS  
ALLOWS AIR TO FLOW THROUGH THE VALVE.

VALVE SHOWN IN OPEN POSITION