



FIGURE 3

10200-1/2

SUPPLY AIR AT INPUT PORT IS EXHAUSTED TO THE ATMOSPHERE. AIR AT
OUTLET PORT IS RETAINED AT SAME PRESSURE AT WHAT IT WAS WHEN
VALVE OPENED IN FIGURE 1.

VALVE SHOWN IN INITIAL OR CLOSED POSITION