



FIGURE 3

*2000D-1/2*

RELEASE OF INLET PORT AIR PRESSURE MOVES THE DIAPHRAGM UP CLOSING THE INLET PORT. THIS ALLOWS DELIVERED AIR TO FLOW FROM BOTH OUTLET PORTS AND EXIT THROUGH THE EXHAUST PORT. THIS CAUSES ENGAGEMENT OF THE SPRING BRAKES.

VALVE SHOWN IN SPRING BRAKE ENGAGEMENT