



FIGURE 3

110410

RELEASE OF CONTROL PORT AIR PRESSURE MOVES THE PISTON AND SPOOL UP ALLOWING DELIVERED AIR TO FLOW FROM BOTH PORTS AND EXIT THROUGH THE EXHAUST PORT. THIS ALLOWS THE RELEASE OF THE SERVICE BRAKES.

VALVE SHOWN IN A BRAKE RELEASE