



FIGURE 1

110570

SUPPLY AIR FROM TRAILER RESERVOIR IS INTRODUCED INTO THE VALVE
THRU THE SUPPLY PORT INDICATED AS 'RES' (RESERVOIR).

VALVE SHOWN IN SUPPLY OR RELEASE POSITION