



FIGURE 2

110570

AIR FLOWS INTO CONTROL PORT, MOVING PISTON AND SPOOL DOWN TO DELIVER AIR TO OPEN DELIVERY PORT AND REGULATED DOLLY PORT. THE DOLLY PORT IS REGULATED TO PROVIDE A BALANCED AIR FLOW.

VALVE SHOWN IN A BRAKE APPLICATION