



FIGURE 1
110580

SUPPLY AIR FROM TRAILER RESERVOIR IS INTRODUCED INTO THE VALVE
THRU THE SUPPLY PORT INDICATED AS 'RES' (RESERVOIR).

VALVE SHOWN IN SUPPLY OR RELEASE POSITION