



FIGURE 2

110580

AIR FLOWS INTO CONTROL PORT, MOVING PISTON AND SPOOL DOWN TO DELIVER AIR TO BOTH DELIVERY PORTS.

VALVE SHOWN IN A BRAKE APPLICATION