



FIGURE 1  
780215

CONTROL OR DELIVERY AIR IS DIRECTED INTO THE VALVE VIA THE INLET PORT MOVING THE SEAT DOWNWARD CLOSING OFF THE PILOT PORT. THIS ALLOWS THE SERVICE BRAKES TO BE ACTUATED ONLY WITH THE LIFT AXLE(S) IN THE DOWN POSITION.

VALVE SHOWN WITH LIFT AXLE(S)  
TRANSITIONING TO THE DOWN POSITION