



FIGURE 1
110800

SUPPLY AIR FROM THE TRACTOR IS FIRST INTRODUCED INTO THE VALVE THRU THE SUPPLY PORT MARKED (A), MOVING THE 7113 PISTON & 110235 MOVABLE SEAT ASSEMBLY DOWNWARD AND CLOSING THE EXHAUST PORT MARKED (E).

VALVE SHOWN IN SUPPLY OR RELEASE POSITION