



FIGURE 2  
110800

SUPPLY AIR FROM THE TRACTOR FLOWS DIRECTLY TO THE PARKING BRAKES THRU DELIVERY PORTS MARKED (C) ALSO UTILIZES RESERVOIR PRESSURE FOR FASTER RELEASE OF SPRING BRAKES.

VALVE SHOWN IN SUPPLY OR RELEASE POSITION